
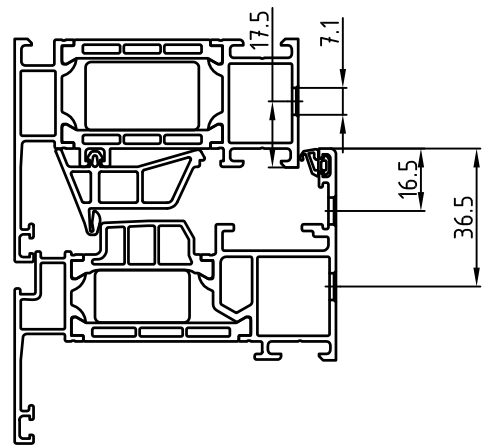
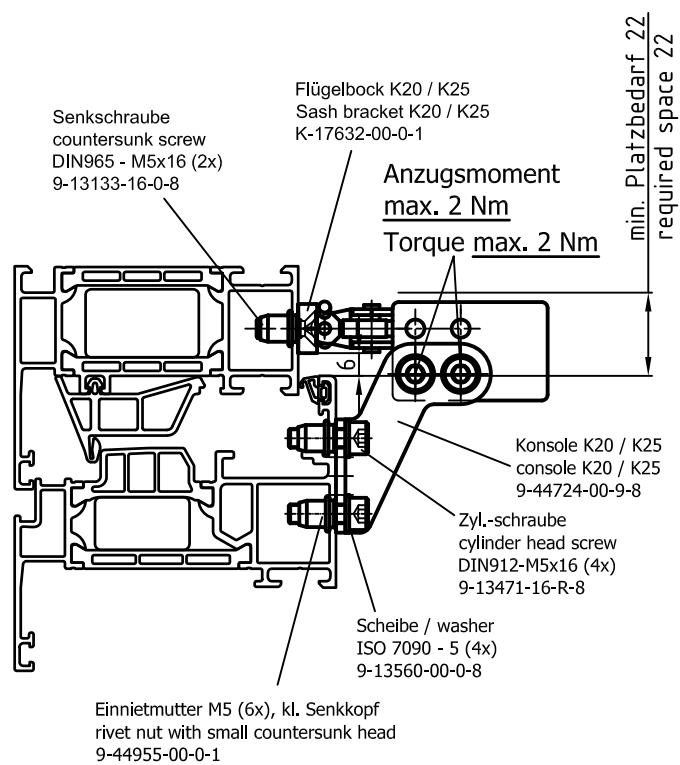


Achtung:
Federstecker muß von Seite Kabelaustritt eingesteckt und arretiert werden.
Attention:
Spring cotter will be plugged in from cable outlet side and locked.

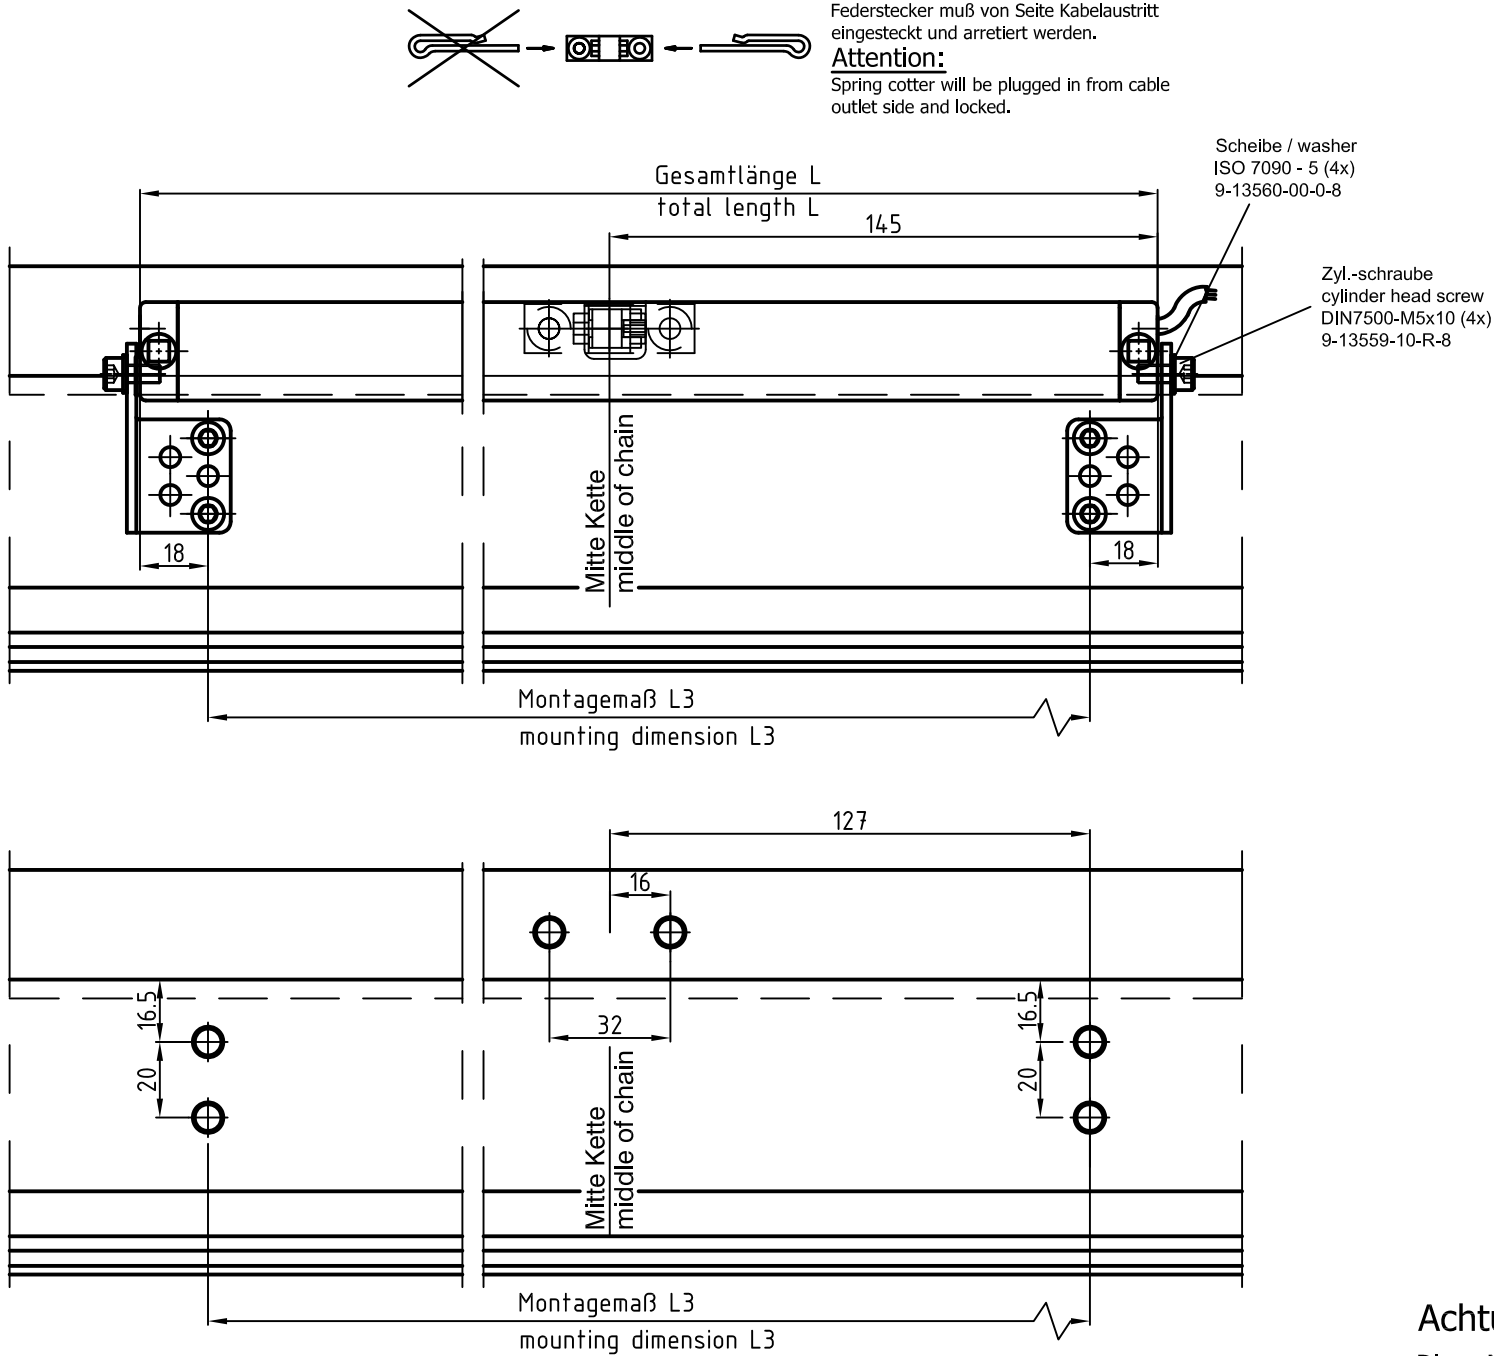

Achtung: Bei Kippfenster Sicherheitschere einbauen!

Diese Montageanleitung wendet sich an ausgebildetes Fachpersonal, Grundlegende Arbeitsschritte werden nicht näher erläutert

Achtung: Alle Maße sind gem. VOB am Bau zu prüfen und ggf. anzupassen !

Die Montage- und Betriebsanleitung ist Bestandteil dieser Einbauzeichnung und ist daher zu beachten

Attention: Insert security stay with tilt window!

This assembly instructions apply to trained personnel, basic working steps are not explained

Attention: All dimensions are to be checked at the building and if necessary adapted!

The assembly and operating instruction are a component of this installation drawing and are from there to be considered

Bezeichnung / description	Artikel-Nr. / material number	Hub / stroke (mm)	Montagemaß / mounting dim. L3 (mm)	Gesamtlänge / total length L (mm)	Flügelhöhe / sash height min. (mm)	max. Schub-/Zugkraft shear-/tractive force
Eltral K20	K-17645-20-0-00	200	299	335	325	200N / 200N
Eltral K20	K-17645-30-0-00	300	344	380	450	200N / 200N
Eltral K20	K-17645-40-0-00	400	394	430	550	200N / 200N
Eltral K25	K-17646-20-0-00	200	299	335	325	250N / 250N
Eltral K25 Synchron	K-17581-20-0-00	200	299	335	325	250N / 250N
Eltral K25	K-17646-30-0-00	300	344	380	450	250N / 250N
Eltral K25 Synchron	K-17581-30-0-00	300	344	380	450	250N / 250N
Eltral K25	K-17646-40-0-00	400	394	430	550	200N / 250N
Eltral K25 Synchron	K-17581-40-0-00	400	394	430	550	200N / 250N
Eltral K25	K-17646-50-0-00	500	509	545	700	100N / 250N
Eltral K25 Synchron	K-17581-50-0-00	500	509	545	700	100N / 250N
Eltral K25	K-17646-60-0-00	600	509	545	800	50N / 250N
Eltral K25 Synchron	K-17581-60-0-00	600	509	545	800	50N / 250N





Description

Montageanleitung ELTRAL K20 / K25, Kippfenster, Flügelmontage, 24V, Schüco

mounting instruction ELTRAL K20 / K25, tilt window, sash mounting, 24V, Schüco

Bef.-Garn. / mounting set K-17595-00-0-00

 	Release No. 7638	Level	release		Scale 1:2	Modification neu erstellt	Size 3
	Mod. No. G21703	Ver.	--	--			
	Replacement for --					Drawing No. 0-44932-IE	Sheet 1/5

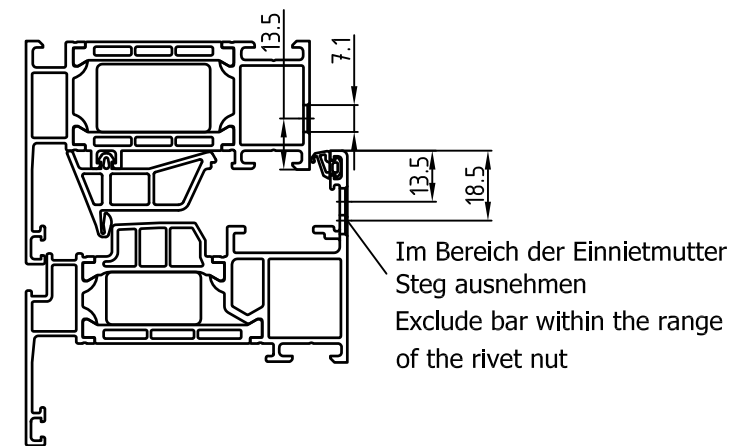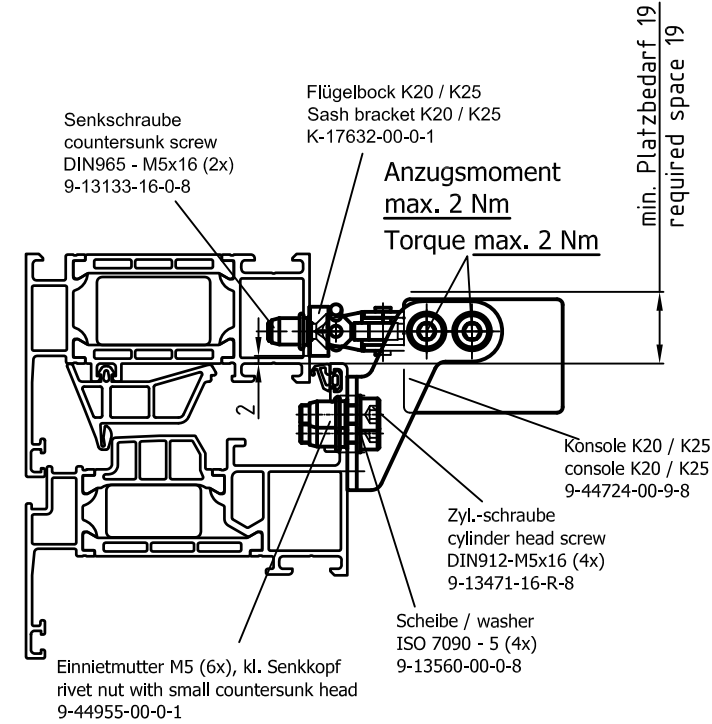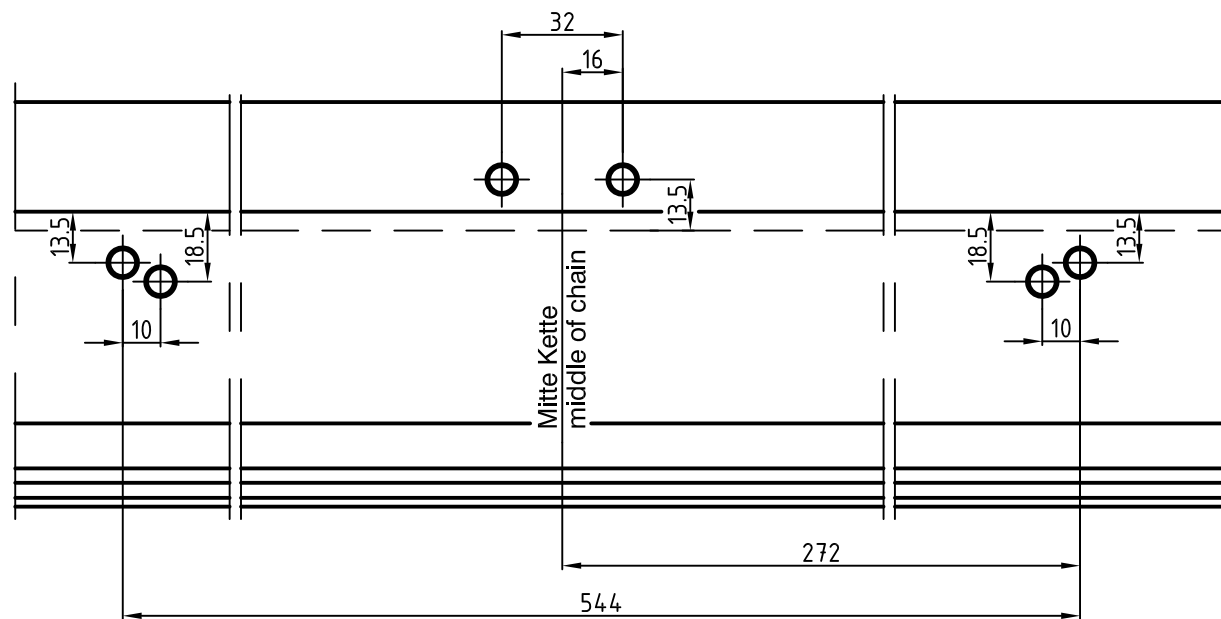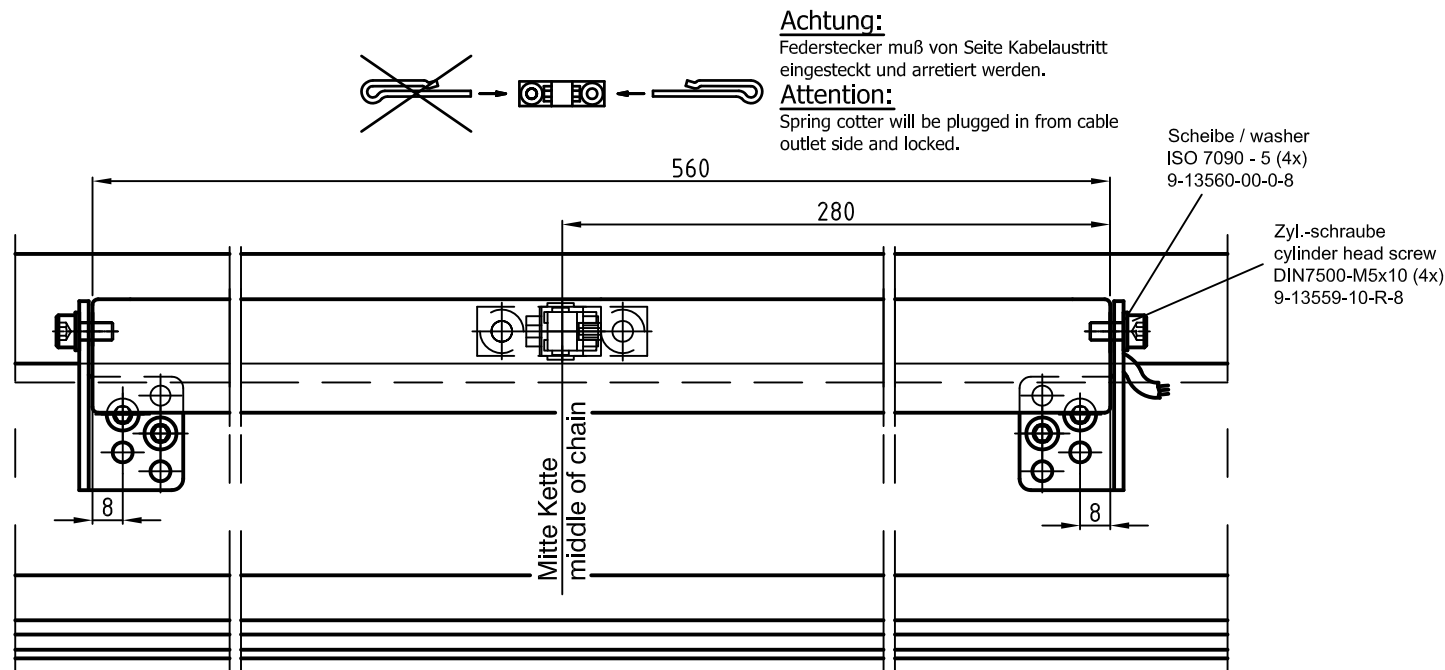

Achtung: Bei Kippfenster Sicherheitschere einbauen!

Diese Montageanleitung wendet sich an ausgebildetes Fachpersonal, Grundlegende Arbeitsschritte werden nicht näher erläutert

Achtung: Alle Maße sind gem. VOB am Bau zu prüfen und ggf. anzupassen !

Die Montage- und Betriebsanleitung ist Bestandteil dieser Einbauzeichnung und ist daher zu beachten

Attention: Insert security stay with tilt window!

This assembly instructions apply to trained personnel, basic working steps are not explained




Attention: All dimensions are to be checked at the building and if necessary adapted!

The assembly and operating instruction are a component of this installation drawing and are from there to be considered

Bezeichnung / description	Artikel-Nr. / material number	Hub / stroke (mm)	Flügelhöhe / sash height min. (mm)	max. Schub-/Zugkraft shear-/tractive force
Eltral K25 Eltral K25 Synchro	K-17647-20-0-00 K-17582-20-0-00	200	325	250N / 250N
Eltral K25 Eltral K25 Synchro	K-17647-30-0-00 K-17582-30-0-00	300	500	250N / 250N
Eltral K25 Eltral K25 Synchro	K-17647-40-0-00 K-17582-40-0-00	400	750	250N / 250N

Description Montageanleitung ELTRAL K25, Kippfenster, Flügelmontage, 230V, Schüco, mounting instruction ELTRAL K25, tilt window, sash mounting, 230V, Schüco, Bef.-Garn. / mounting set K-17595-00-0-00							
 	Release No. 7638	Level	release		Scale	Modification neu erstellt	Size 3
	Mod. No. G21703	Ver.	--	--	1:2		
			Draft	22.09.2008	FI	Drawing No. 0-44932-IE	Sheet 2/5
	Replacement for --						

Achtung:
Federstecker muß von Seite Kabelaustritt eingesteckt und arretiert werden.
Attention:
Spring cotter will be plugged in from cable outlet side and locked.

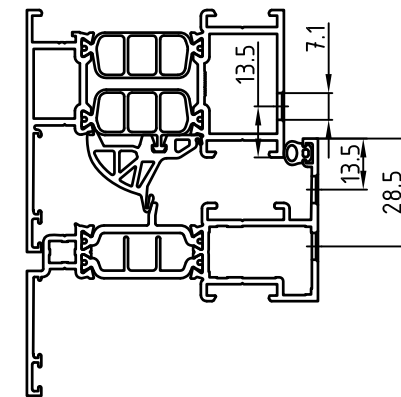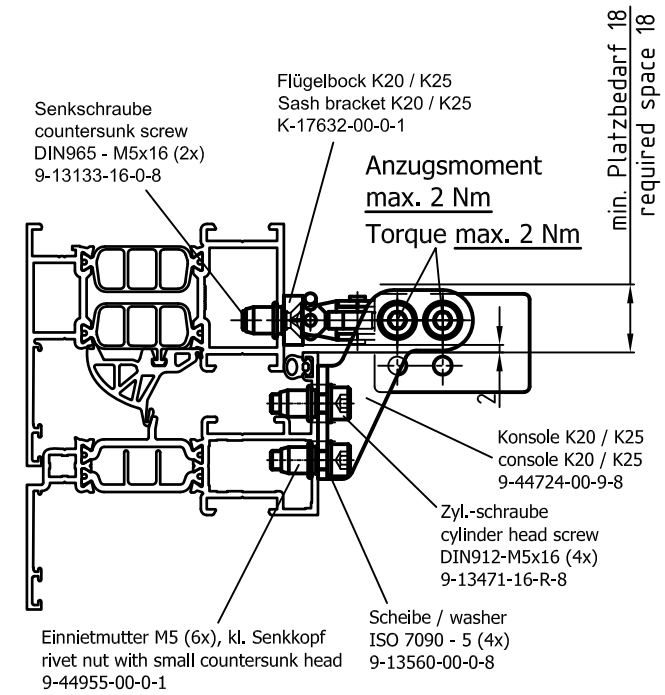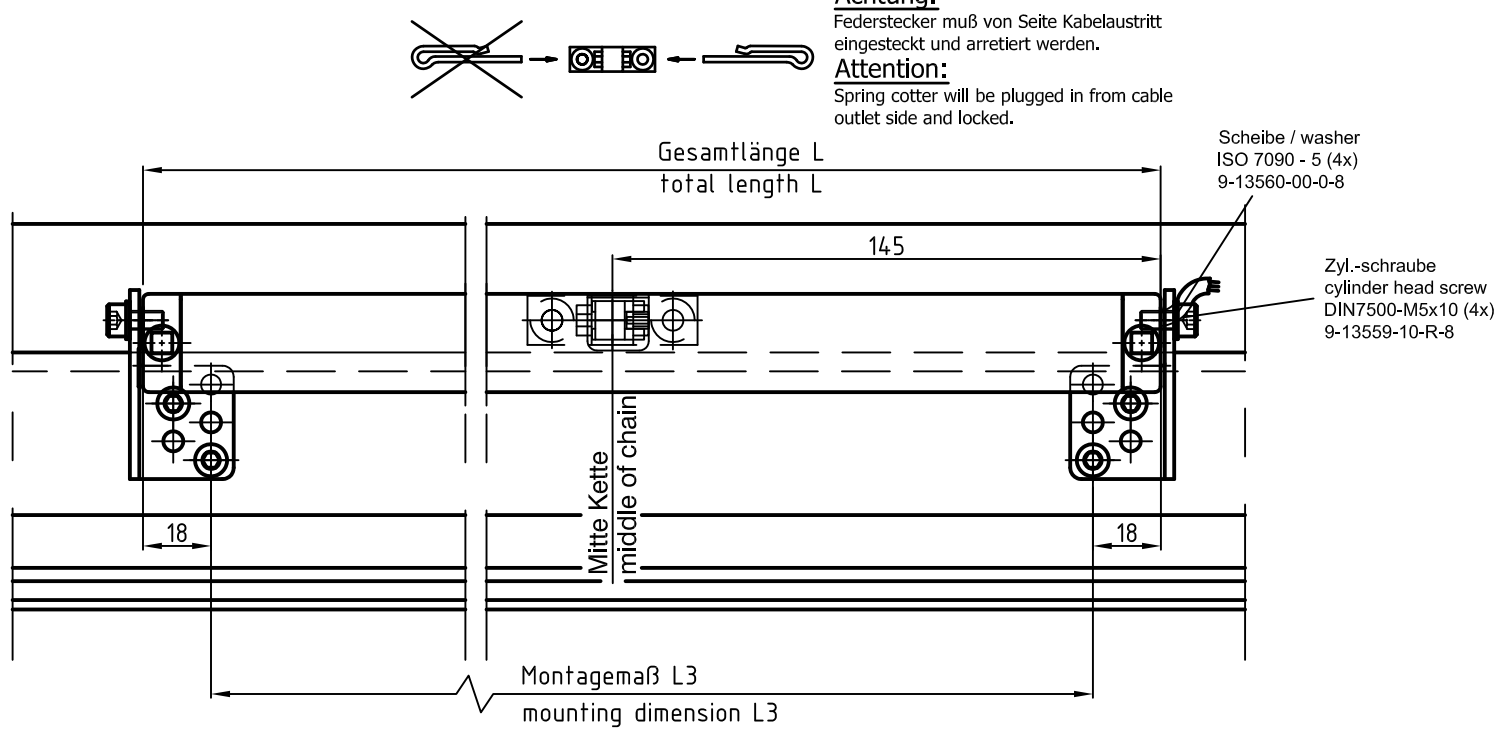

Achtung: Bei Kippfenster Sicherheitschere einbauen!

Diese Montageanleitung wendet sich an ausgebildetes Fachpersonal, Grundlegende Arbeitsschritte werden nicht näher erläutert

Achtung: Alle Maße sind gem. VOB am Bau zu prüfen und ggf. anzupassen !

Die Montage- und Betriebsanleitung ist Bestandteil dieser Einbauzeichnung und ist daher zu beachten

Attention: Insert security stay with tilt window!




This assembly instructions apply to trained personnel, basic working steps are not explained

Attention: All dimensions are to be checked at the building and if necessary adapted!

The assembly and operating instruction are a component of this installation drawing and are from there to be considered

Bezeichnung / description	Artikel-Nr. / material number	Hub / stroke (mm)	Montagemaß / mounting dim. L3 (mm)	Gesamtlänge / total length L (mm)	Flügelhöhe / sash height min. (mm)	max. Schub-/Zugkraft shear-/tractive force
Eltral K20	K-17645-20-0-00	200	299	335	325	200N / 200N
Eltral K20	K-17645-30-0-00	300	344	380	500	200N / 200N
Eltral K20	K-17645-40-0-00	400	394	430	750	200N / 200N
Eltral K25	K-17646-20-0-00	200	299	335	325	250N / 250N
Eltral K25 Synchro	K-17581-20-0-00	200	299	335	325	250N / 250N
Eltral K25	K-17646-30-0-00	300	344	380	500	250N / 250N
Eltral K25 Synchro	K-17581-30-0-00	300	344	380	500	250N / 250N
Eltral K25	K-17646-40-0-00	400	394	430	750	200N / 250N
Eltral K25 Synchro	K-17581-40-0-00	400	394	430	750	200N / 250N
Eltral K25	K-17646-50-0-00	500	509	545	1000	100N / 250N
Eltral K25 Synchro	K-17581-50-0-00	500	509	545	1000	100N / 250N
Eltral K25	K-17646-60-0-00	600	509	545	1200	50N / 250N
Eltral K25 Synchro	K-17581-60-0-00	600	509	545	1200	50N / 250N

Description Montageanleitung ELTRAL K20 / K25, Kippfenster, Flügelmontage, 24V, Reynaers mounting instruction ELTRAL K20 / K25, tilt window, sash mounting, 24V, Reynaers Bef.-Garn. / mounting set K-17595-00-0-00						
 	Release No. 7638	Level	release		Scale	Modification
	Mod. No. G21703	Ver.	--	--	1:2	neu erstellt
	Replacement for --	Draft	22.09.2008	FI		Drawing No. 0-44932-IE
						Size 3
						Sheet 3/5

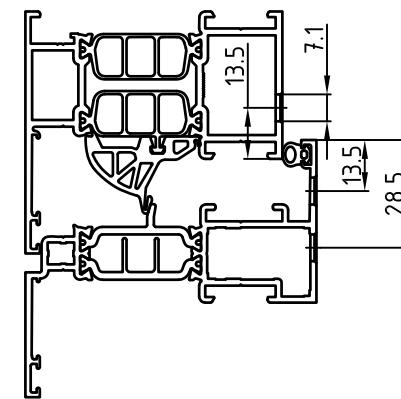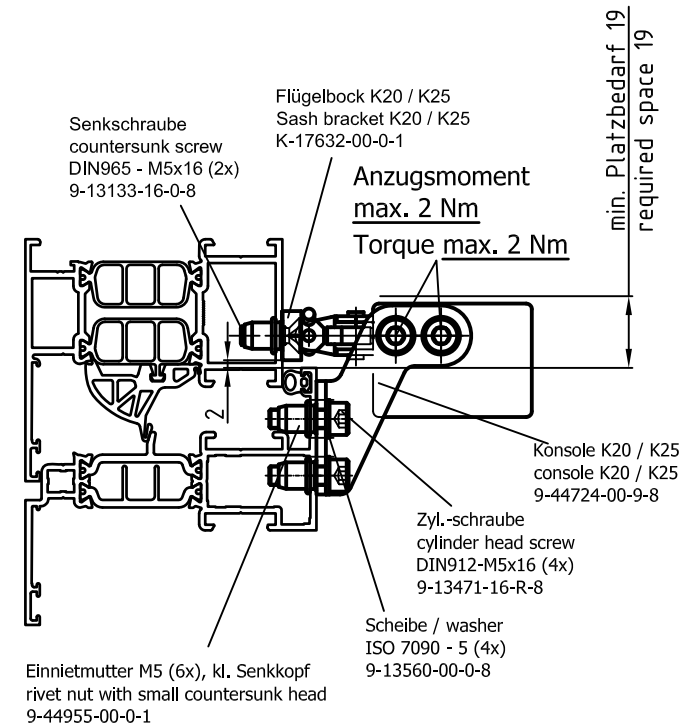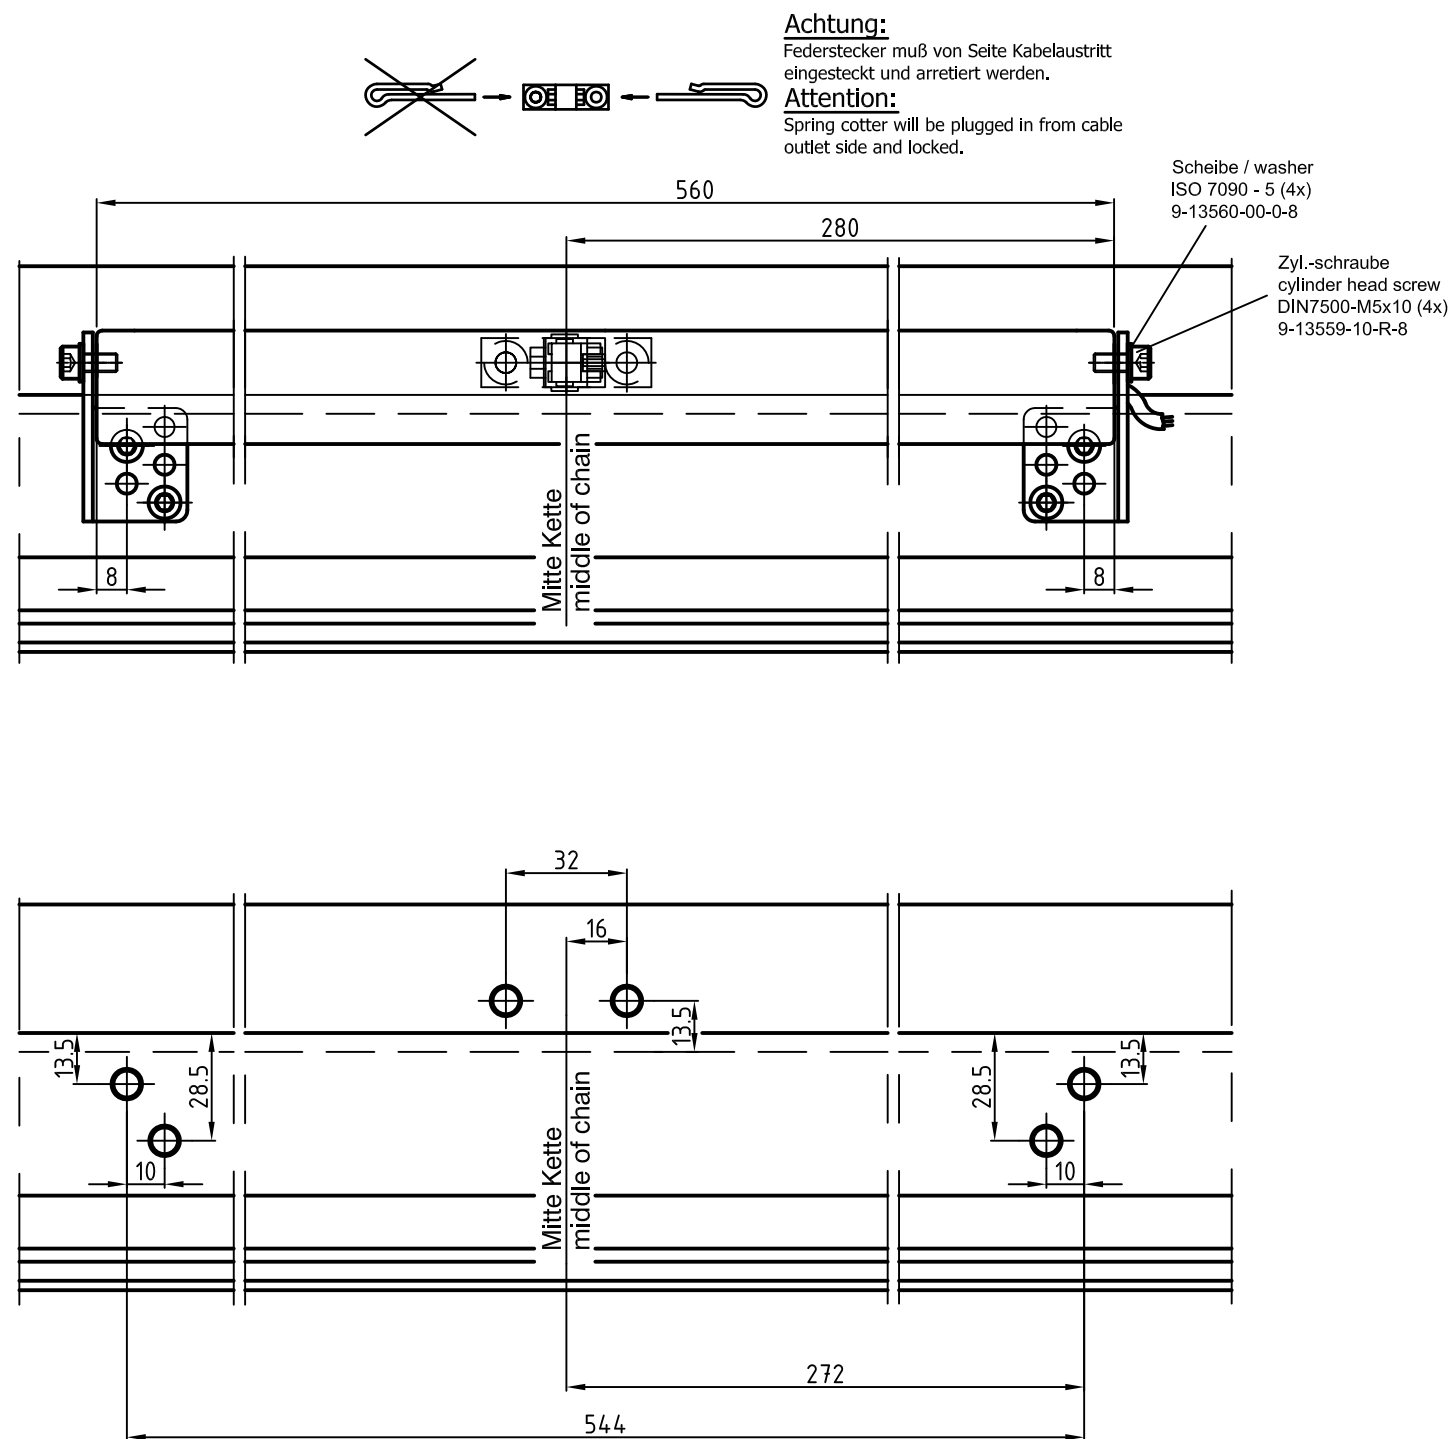

Achtung: Bei Kippfenster Sicherheitschere einbauen!

Diese Montageanleitung wendet sich an ausgebildetes Fachpersonal, Grundlegende Arbeitsschritte werden nicht näher erläutert

Achtung: Alle Maße sind gem. VOB am Bau zu prüfen und ggf. anzupassen !

Die Montage- und Betriebsanleitung ist Bestandteil dieser Einbauzeichnung und ist daher zu beachten

Attention: Insert security stay with tilt window!

This assembly instructions apply to trained personnel, basic working steps are not explained

Attention: All dimensions are to be checked at the building and if necessary adapted!

The assembly and operating instruction are a component of this installation drawing and are from there to be considered

Bezeichnung / description	Artikel-Nr. / material number	Hub / stroke (mm)	Flügelhöhe / sash height min. (mm)	max. Schub-/Zugkraft shear-/tractive force
Eltral K25 Eltral K25 Synchro	K-17647-20-0-00 K-17582-20-0-00	200	325	250N / 250N
Eltral K25 Eltral K25 Synchro	K-17647-30-0-00 K-17582-30-0-00	300	500	250N / 250N
Eltral K25 Eltral K25 Synchro	K-17647-40-0-00 K-17582-40-0-00	400	750	250N / 250N

Description Montageanleitung ELTRAL K25, Kippfenster, Flügelmontage, 230V, Reynaers, mounting instruction ELTRAL K25, tilt window, sash mounting, 230V, Reynaers, Bef.-Garn. / mounting set K-17595-00-0-00							
	Release No. 7638	Level	release		Scale	Modification neu erstellt	Size 3
	Mod. No. G21703	Ver.	--	--	1:2		
		Draft	22.09.2008	FI			
		Replacement for --					Drawing No. 0-44932-IE

